

336 Stamm Rd.

QUANTUM INDUSTRIES
Newington, Ct. 06111

Phone (203) 667-7655
Fax (203) 666-876

SERVICE NOTICE

RE: Casino Strip Games

PROGRAM CHANGE INSTRUCTIONS:

When changing from one Casino Strip Disc to another the program on the Main Logic Board must also be changed. In order for the game to operate properly you must ****INITIALIZE**** the board.

Initialization Procedure:

- A) Turn the Game OFF
- B) Put Dipswitch #4 located on the Main Logic Board to it's OFF position.
- C) Change the Disc and program.
- D) Turn the Game ON .
- E) Play the game to be sure that it is working properly.
- F) Put Dipswitch #4 in it's ON position.
- G) Reset the options.

When changing a Casino Strip game to another version Insert the Program as follows:

Strip 0 into U36
Strip 1 into U7
Strip 2 into U8
Strip 3 into U9

Important

Important

Important

The correct Disc must be used with the correct Program Chips, you may not interchange parts.

EXAMPLE: A Casino Strip VIII Disc will only work with a Casino Strip VIII Program.

**** Programs labeled ASTRIP are Intended to be used with Pioneer LD V1000 / V1001 Disc Players ONLY.**

**** Programs labeled SASTRIP are Intended to be used with Sony Disc Players ONLY.**

For any Shooting, Gallery or Zip Strip up-date, you must jump pin 13 of U12 on the Main Board to pin 18 of U12 in order for the game to operate properly.